Non-Maintained LED Emergency Pack

2W (230 - 240V)



Product Code: FLEMLD2
Barcode: 6002844063689




- Unit requires an unswitched 230 240V mains to charge the battery.
- The unit will only energize in the event of an electrical mains supply failure.
- Batteries must be charged for 24 hours to ensure full emergency duration before testing.
- 3 year warranty.

Non-Maintained LED Emergency Pack

This FLEMLD2 2W constant current non-maintained LED emergency light system is capable of providing 3 hours of emergency lighting when fully charged.

Diagram

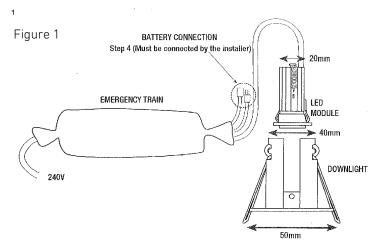

TECHNICAL INFORMATION

Specifications:

Wattage	2W	
Lifetime when fully charged	3 hours	
Input	230 - 240V	
Battery discharge rate current	0.55A	

Installation Instructions

- 1. Select the required position for the luminaire. Beware of joints, water pipes and electric cables.
- 2. Drill the cutout in the postion required (cutout is $40 \text{mm } \emptyset$).
- 3. Connect the pack to the main supply, Brown to the Live supply (Red or Brown) and Blue to the Neutral (Black or Blue) using a suitable junction box.
- 4. Connect the battery as shown in Figure 1.
- 5. Push the emergancy train through the cutout in the ceiling.
- 6. Slide the legs of the mounting spring clips into the celing cutout and push the fitting up into the aperture.

PACKAGE CONTENTS



- 1 x Non-Maintained LED Emergency Pack
- 1 x Instruction Manual



Height	Depth	Width	Weight
(mm)	(mm)	(mm)	(kg)
64	65	290	0,38



